 



Packaging contents

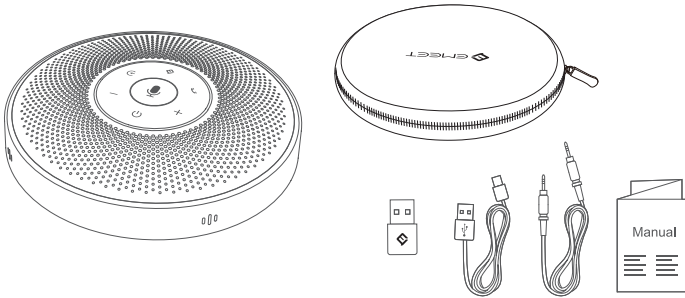


Product description

The OfficeCore M2 smart wireless speakerphone allows sending and receiving audio during talk time. Connection of OfficeCore M2 product to PC, phone or tablet PC via Bluetooth, USB or AUX (analog audio) is available. The OfficeCore M2 products include a small portable omnidirectional microphone speaker with high-quality connection for far-field, 360-degree sound recognition and pick-up.

 Function display

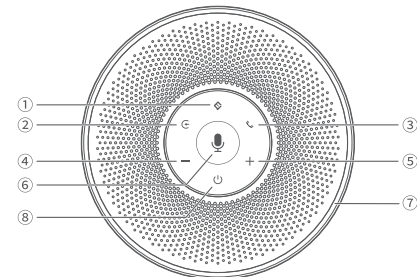

 - ① AI noise reduction on/off button
- ② Input source switch button
- ③ Answer/end button
- ④ Volume down
- ⑤ Volume up
- ⑥ Mute button
- ⑦ Status light
- ⑧ On/off



- ⑨ Lock
- ⑩ AUX audio input port
- ⑪ Earphone audio output port
- ⑫ USB port
- ⑬ Microphone

How to use

1、 On/off

 


Long press On/Off “  ” for 2 seconds to turn on or off.

2. Three operating modes.




2.1 The first mode: connect the computer to OfficeCore M2 product with a USB cable

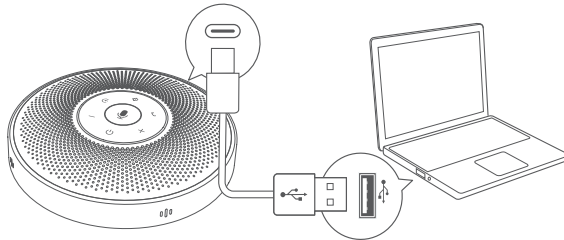



2.2 The second mode: connect OfficeCore M2 product via Bluetooth



- ① Press the “  ” for two seconds. The status light is blue when pairing
- ② Turn on Bluetooth on mobile phone or PC and select OfficeCore M2 product from the list of devices

  2.3 The third mode: connect OfficeCore M2 product with AUX analog audio wire

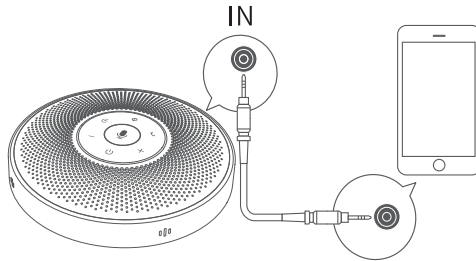



2.4 When multiple sound sources are input simultaneously, select the required source by pressing the “  ” button.



- ① The blue light shows switch to Bluetooth status
- ② The white light shows switch to AUX status
- ③ The green light shows switch to USB status


3. Answer/ end the call



- ① When there is an incoming call, press the “  ” button to answer the call
- ② In the talk mode, press the “  ” button to end the call

4. AI noise reduction on/off



Short press “  ” AI Noise Reduction button to enable/disable AI noise function. Turning on VoicelA noise reduction can greatly reduce some noises in the meeting scene, such as from keyboard tapping, air conditioning noise, and general unwanted background noise

Note: After the noise reduction mode is enabled, in order to maintain good sound pickup effect, please make a call within a sound pickup range of 1.5 meters.

 
5. Control volume




Press the volume “ + ”, volume “ - ” to increase or decrease the volume.

6. Charge OfficeCore M2 product

6.1 Via the computer

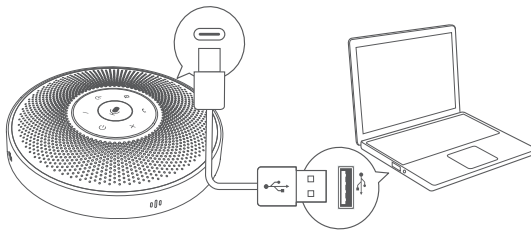

 
6.2 Through the adapter

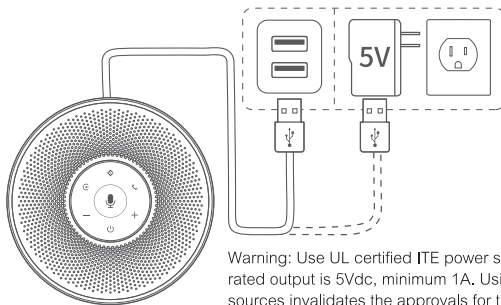


Warning: Use UL certified ITE power supply only, the rated output is 5Vdc, minimum 1A. Using other power sources invalidates the approvals for this device and triggers potential danger.

7. Check the battery




Short press “  ” to check the current residual capacity of OfficeCore M2 product. The percentage of the green light represents

 When the battery is low, the ring light will be red with a low battery beep (once every 5 minutes) till the power is exhausted and the device automatically shuts down.

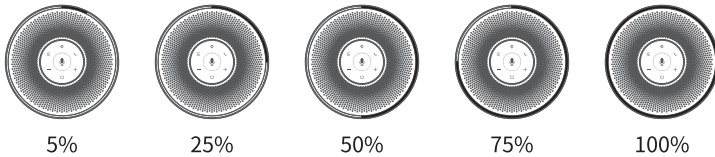


8. External speaker \ headset

 8.1 External speaker: connect the speaker to the AUX OUT port of OfficeCore M2 product with audio wire. The sound will be played through the speaker to volume up.

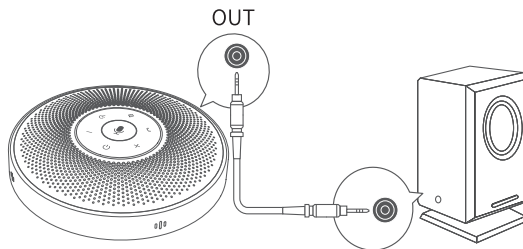

 
8.2 External headset: connect the headset to the AUX OUT port of OfficeCore M2 product. The sound will be played through the headset.

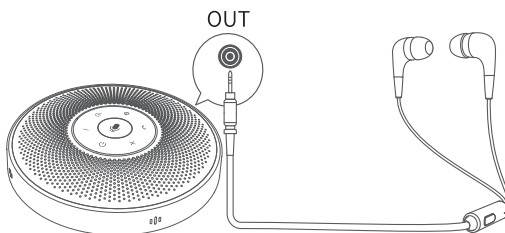

9. Bluetooth wireless adaptation

- ① Plug Bluetooth wireless adapter into computer, turn on OfficeCore M2 product and enter pairing.
- ② The Bluetooth wireless adapter will be automatically connected to Office-Core M2 product.

 For more information, please visit www.emeeet.ai/support

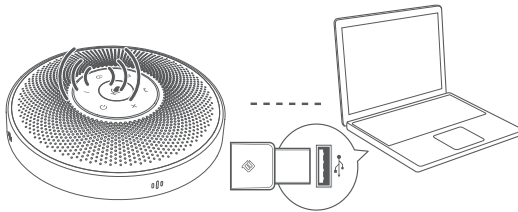

Notes

- ① Do not place the battery in direct sunlight or fire exposure places.
- ② Note: If the battery or battery pack is improperly replaced, there will be explosion hazard. Only technical engineers of our company or our authorized service points can replace with battery of the same or equivalent type.
- ③ The whole device and accessories should be placed in dry ventilated indoor places to avoid rain, water drop, water ingress, fall and coverage of vent holes.
- ④ To protect the environment, put the discarded products into the designated sorting trash bin and do not discard directly.



Only applicable to areas of an altitude below 2000m



Only applicable to non-tropical climate



The Bluetooth® words and trademarks are reserved by Bluetooth SIG, Inc.

Product information

Speaker output rating	3W RMS
Frequency response	20Hz~20KHz(± 1 dB)
SNR	>80dB
Bluetooth version	V4.2
Bluetooth distance	20m
Microphone sensitivity	26dB
Microphone frequency response	100Hz~8KHz
Microphone directivity	360 degree omnidirectional
Battery specification	3.63V/2600mAh
Charge time	3-4hours
Usage time	Talk time: 12 hours(Depending on the usage, the talk time varies)
Charge specification	5V/1A
Size	125x125x35mm
Weight	300g

FAQ:

Problem or phenomenon	Possible Causes	Method
Startup failure	Low or no battery	Access the adapter to charge
Automatic shutdown soon after starting up	Low battery	Access the adapter to charge
No sound	Check the correct connection; select correct audio input; turn on the volume	Select the correct audio input; adjust the device volume
USB failure	Error with using USB wire	Please use the original USB wire
AUX failure	Error with using AUX wire	Please use the original AUX wire
Device charge failure	Faulty charging device or full battery	Replace with a functional device

Warranty

Limited one (1) Year Warranty with proof of purchase. Exempt from warranty are limited-life consumable components subject to normal wear and tear, e.g. batteries and other accessories.

Contact us

For all customer service and technical support

Email: support@emeet.ai Website: www.emeet.ai

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

IC

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.