


eMeet App VIP Directional Recording

Version	Author	Date	Content
1.0	CarryRee	2019-10-14	Create

Contents

1. Turn on VIP VIP directional recording.....	3
2. VIP directional recording status on the eMeet APP.....	4
3. VIP directional recording status on the device.....	5
4. View the recorded file.....	6
5. Auto upload device file	7
6. Automatic transfer.....	8

1. Turn on VIP VIP directional recording

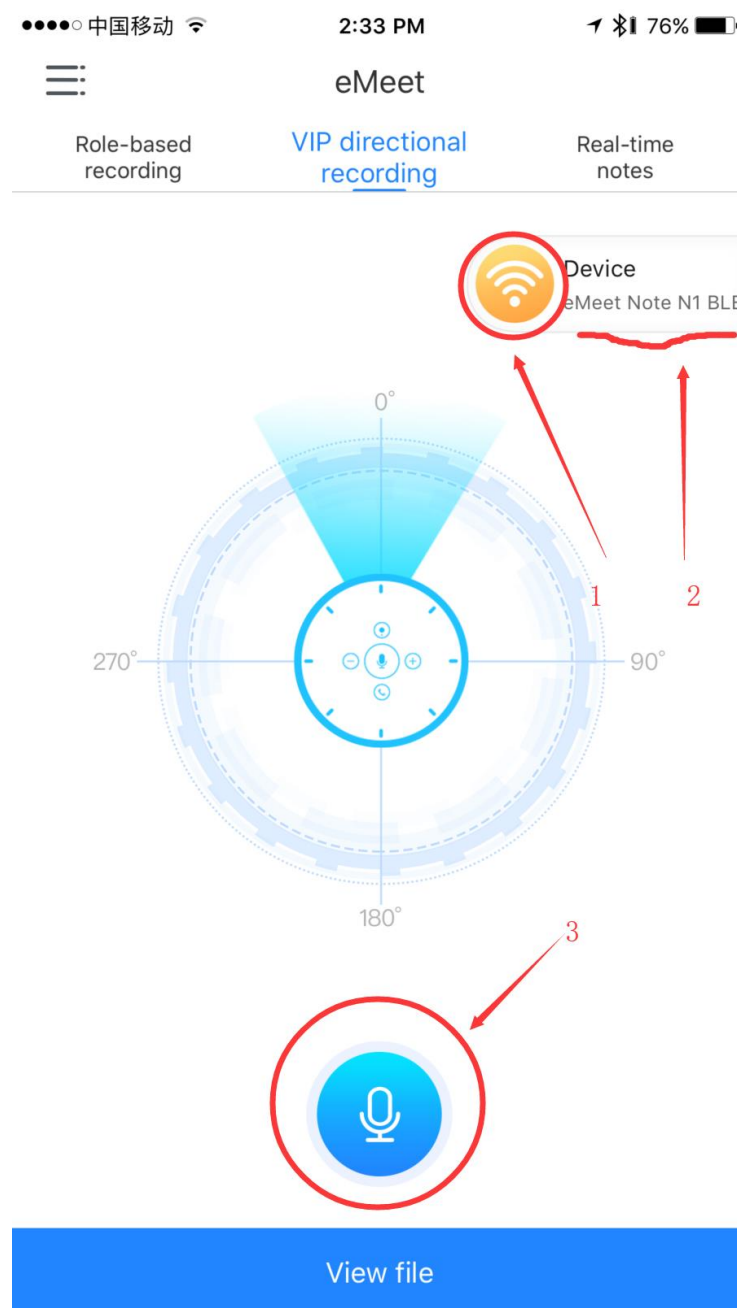


Mark 1: Confirm the connection icon, indicating that Note is connected to the network.

Mark 2: The eMeet APP connects to the Note via BLE, and the device name of the Note will appear.

Mark 3: Click to open VIP directional recording.

2. VIP directional recording status on the eMeet APP

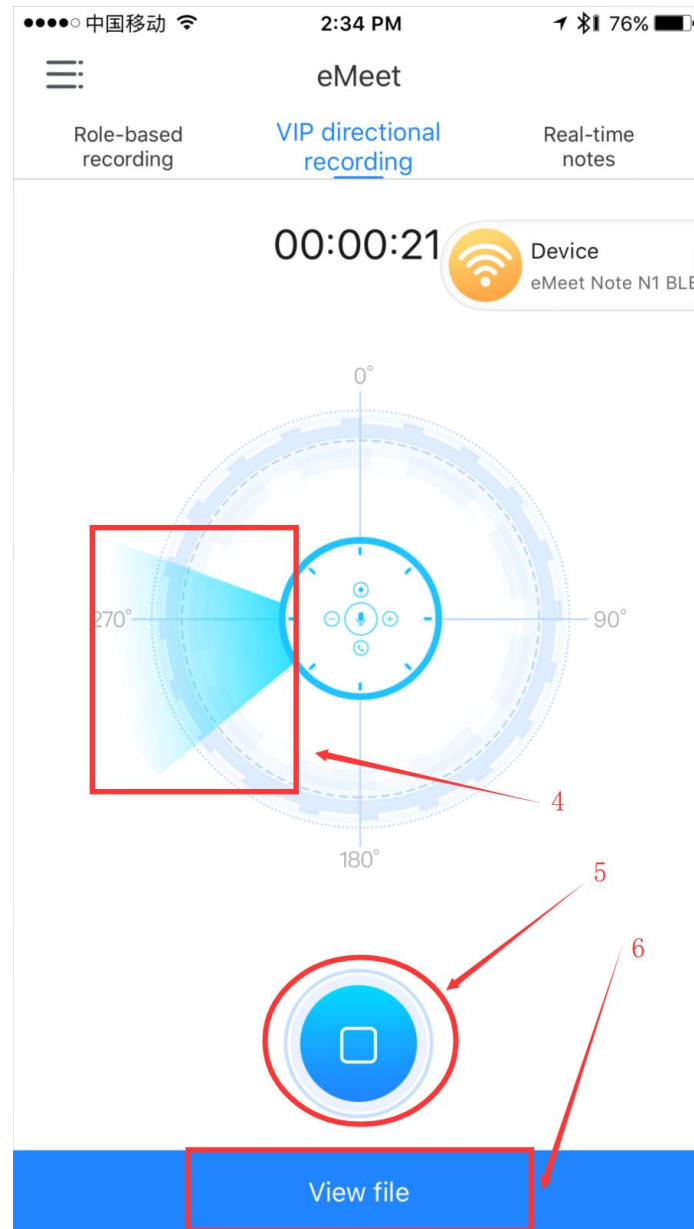

Mark 4: Press and hold the blue area, turn clockwise or counterclockwise to adjust the angle, and the Note light will change.

Mark 5: Click to stop VIP directional recording.

Mark 6: View audio files.


3. VIP directional recording status on the device



Mark 7: When the device turns on VIP directional recording, a green light flashes. Click this button to stop VIP directional recording.

Mark 8: When using eMeet APP to adjust the direction, Note's light will change to the direction of adjustment.


4. View the recorded file

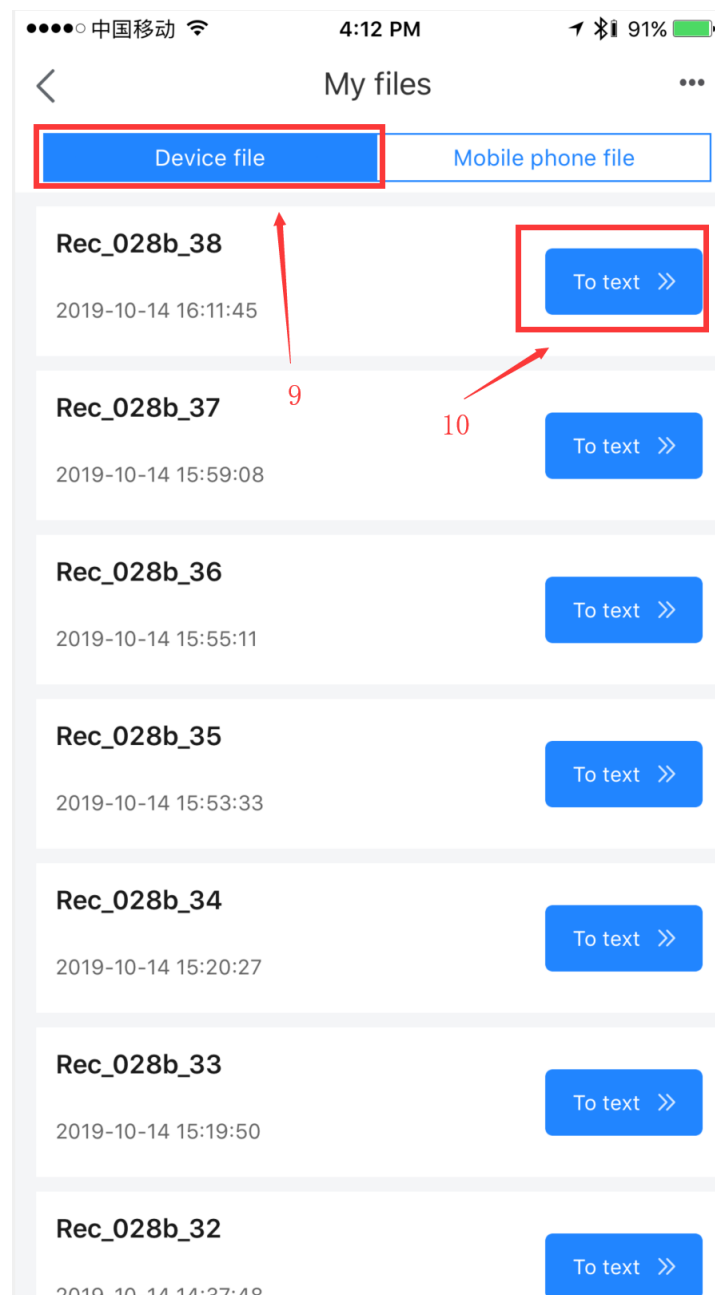


Mark 9: Click View File to enter My File. The generated recording file will be displayed on the Device file page.

Mark 10: Click on To Text to convert the generated recording to text.

5. Auto upload device file

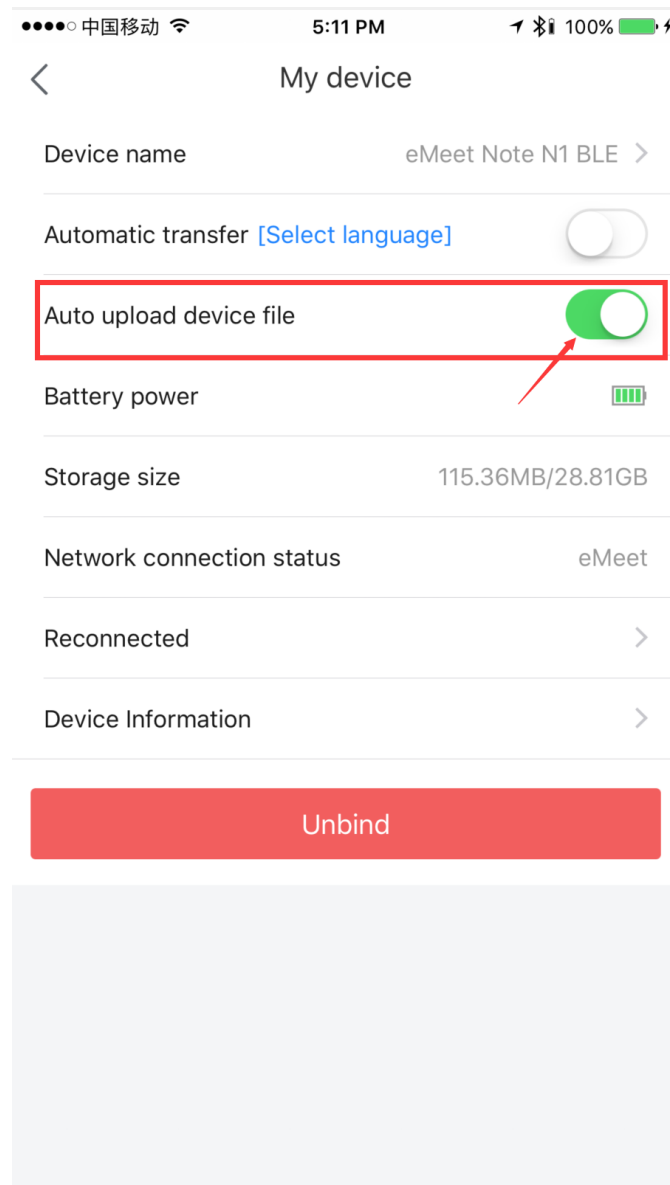

6. Automatic transfer

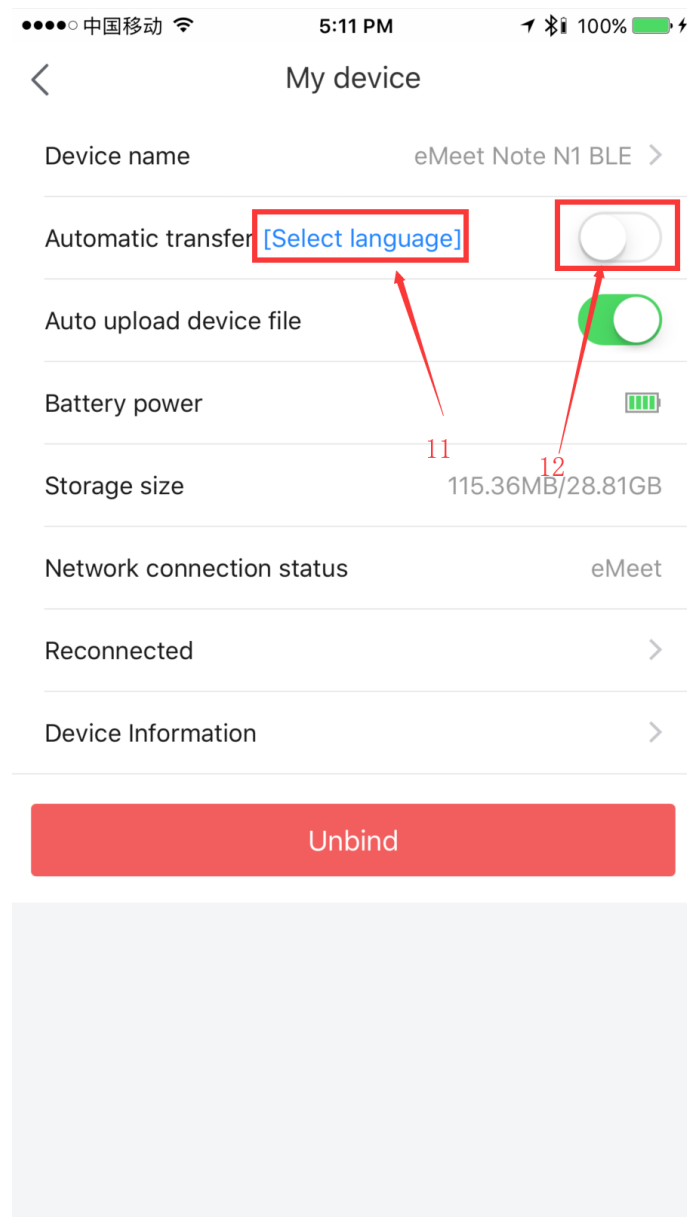

Mark 11: After the recording is completed, it can be automatically transferred. You need to set the language to be transferred.

Mark 12: language to be transcoded, turn on the switch, so that each recording will be automatically transferred after uploading.